


Washing machine

- 1) Place the laundry in the machine
- 2) Add detergent and fabric softener

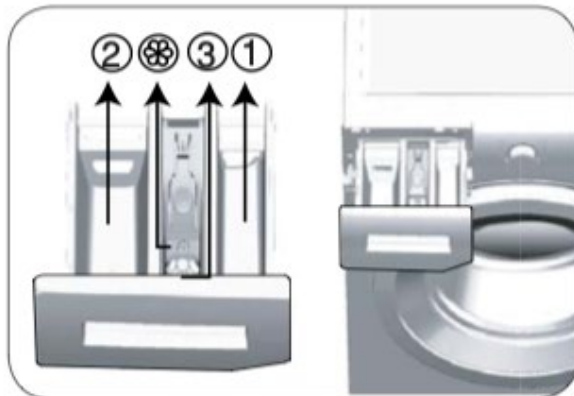

The detergent drawer is composed of three compartments:

- (1) for prewash
- (2) for main wash
- (3) for softener
- (☼) in addition, there is a siphon piece in the softener compartment.

- 3) Depending on the type of fabric, choose a programme

EN						
Program		Max. Load (kg)	Programme Duration (~ min)	Water Consumption (l)	Energy Consumption (kWh)	Max. Speed***
Cotton 90°	90	6	180	87	2.2	1600
Cotton 40°	40	6	180	85	0.95	1600
Cotton 20°	20	6	180	85	0.53	1600
Cotton 60° with Prewash	60	6	200	95	1.8	1600
Cotton Eco 60°	60**	6	240	43.6	0.780	1600
Cotton Eco 60°	60**	3	178	37.3	0.580	1600
Cotton Eco 40°	40**	3	178	37.3	0.600	1600
Synthetics 40°	40	2.5	120	65	0.75	1200
Synthetics 20°	20	2.5	120	65	0.25	1200
Mini 30°	30	6	28	60	0.15	1400
Wool/Hand Wash 40°	40	1.5	65	47	0.45	1200
DownWear 40°	40	1.5	105	85	0.8	1000
Shirts 40°	40	2.5	80	42	0.6	800
Drum Clean	90	-	160	67	2.1	600